

# Auto/ON/OFF switch

IF you want to create a an Auto/ON/OFF switch, then you need to consider following.

## Attention!!!

In this case. E.g.: a hysteresis component needs to be available (configured).

**Functionality:** You own a hysteresis component with the selected interface „Internal memory“.

You can trigger that hysteresis component via a Hand / Automatic control (ON / OFF / AUTOMATIC) on the Powerdog®.

- Go to „Controls“ in the device configuration. Create a new control function by pressing on the green plus.
- Go to „Switches“ and create the „Auto/ON/OFF switch“.



- At name enter e.g.: „Temperature switch“.
- At „Sensor/Counter“ select e.g.: Temperature switch (Hysteresis) [DO\_ VIRTUAL].
- At „Interface select e.g.: D0\_Relais. Confirm with „OK“ until you are at the device configuration.

- Go to „Custom View“ in the device configuration.



- Create a new „Sensor/Counter/Control“ with the green plus.
- At „Sensor/Counter“ select e.g.: Temperature switch (Manual/AutoSwitch) [D0\_Relais]. Confirm two times with „OK“.



- Place the icon on the display and press „OK“. Afterwards go to the device configuration and press „Save“.

